



BYTE AV BOX / WIZARD 6

Wizard 6

dynamic" 🕞



Denna manual visar momenten för att byta manöverbox REM 421 (art. nr. BOX1010) till manöverbox REM 550 (art. nr. BOX1020) på din elrullstol REAL 6100 PLUS. Vi refererar i några avseenden till *"Wizard Guide" (se bild intill)*, där en del generella moment beskrivs i Wizard-programmeringen. Guiden kan vara bra att ha till hands som stöd utöver denna vägledning.

"Wizard Guide"





REM421 (art. nr. BOX1010)

REM550 (art. nr. BOX1020)



DETTA BEHÖVER DU USB-DONGLE DATOR KABEL KABEL ADAPTER BOX

Se till att programmet Wizard 6 är installerat i datorn. Sätt i USB-dongeln så att Wizard 6 hittar en licensnyckel. Koppla nu in DWIZ CABLE KIT i datorn.

OBS! det är viktigt att det sätts in i samma USButgång som tidigare för att Wizard ska fungera.

STEG 1

Lokalisera ikonen för Wizard 6 på skrivbordet och dubbelklicka på den.



STEG 2

Kör Wizard 6 (klicka på "*I accept*"), **A**. Längst ned i högra hörnet står "*Scanning for master module*", **B**.





Är allt korrekt inkopplat och satt med rätt inställningar ska meddelandet "Controller connected" visas i fönstret i vänster nederkant, C samt "Wizard OEM (Advanced)", D, i övre högra hörnet av fönstret.

STEG 3



STEG 4

G.

Change Module Type

Gå vidare i bytet av manöverbox genom att trycka på knappen *"Tools"*, F, i menylisten. Flera val kommer upp; välj *"Change Modul Type"*, G. F. Wizard OEM <u>Eile Tools Hel</u> <u>Writ</u>

man to Castlandar								
Subian Creations		-				_		
Inter-Controller Indusy Inst Reamster			24 Martin Rancing					
		-						
Charge Modely Tape			TICHA AR					
			or growing concerns	-		_		
Antifamour Bill suffere	i harried stretter	and the second		-		_		
	0.000	WAR -						
a contra								
Pages		•						
ope Rot-Onway Ports	140	27 au						
arren up Pruhle Number	Last used	svoting.						
Public Postile attuin Dri	100							
O Test Pattern	No							
nio Swap in Actuator M.	N/							
rworking Booper	101							
ole Charge Beez	Par .							
		- Clines	Poster Option	And the other designs		and the second s		
And the second second second second	Port 1	Prof 2	1 Prof. 2	thut a	Polf 5	ACU		
work liaith Threshol	30	10000	100	- Constant	a second second	Transition of the local division of the loca		
HOUR SOUTH	Page 10	matter	multer	mater	Hatter	AC0		
informal different sectors and and	40	206	200	2008	200	200		
outral Hasimum [%]		A1071				1017		
Inort Throw Shape (%)	100	100	100	- 100		100		
Rodral Hastmum (%) boxt Throw Shape (%) Aort Throw Insuel (%) restlick Angle Company	100	100	100	- 100	8	0		
Ipudnal Maximum (%) hort Throw Shape (%) hort Throw Insuet (%) systex Angle Company, systex Susp Forward/R	100 100 hig	800 0 00	100 Ø N0	0 Ne	B NO	0 100		
Apubral Hasimoure [%] boot Throw Shapet (%) April Throw Travel (%) restrick Angle Companies, restrick Swap Forward/8, restrick Swap Laft/Right	100 0 hq hq	100 0 500 No	100 Ø NO NO	0 0 90 90	II NO NO	0 100 110 110		
putral Hastmum (%) hort Throw Shape (%) hort Throw Insuet (%) mittle Angle Company, mittle Angle Company, mittle Samp Forward, 8, mittle Samp LafoRight state Joyntek 901	100 0 hq hq hq	100 0 50 No 50	100 9 No No No	100 0 No No No	II NO NO NO	0 No No No		
Ipodral Hasimum (%) Jost Theore Shape (%) And Theore Shape (%) estick Angle Company, systick Samp Forward/R, costick Samp (advised) soutick Samp (advised) Samp (advised) (advised) Samp (advised) (advised)	100 0 hg Ng Ng Ng	100 0 00 00 00	100 90 90 90 90 90 90 90 90 90	100 0 Ne Ne	S NO NO NO	0 100 100 100 100		
pubrial Hasimum (%) suit Throw Shape (%) suithine Ensuel (%) suithin Angle Company, suithin Angle Company, suithin Savap Lathinist suithin Savap Lathinist at Asystek 80° exp. Mode Enables exp. Mode Enables exp. Threece.f. (mik) unlike levelistic Waamum	100 0 hg Ng Tes 5	100 0 00 No No	100 9 90 90 90 90 90 90 90 9	100 0 Ne Ne Ne S	NO NO NO NO NO	0 8 2 F		
schall Realmourn (%) Next Throw Shape (%) within Angle Comparis, untick Seage Comparis, untick Seage Comparis, untick Seage Lath/Right state Any-Vick 90° exp. Mode Tradite rep. Threes.t (mix) adds Jeptilia Waamup	100 100 0 he he he he he he he he he he he he he	100 0 200 200 200 200 200 200 200 200 20	100 9 No No No No No No	100 0 Ne Ne 5	100 m 200 m	0 9 98 98 98		
schal Rasimum (Nu) sort Three Shape (Nu) sort Three Travel (Nu) soft Trave Travel (Nu) softex Angle Compares, which Savag Lattylight data Anythek Stri sop Mode Tradisi exp Threeox (real) softex Tradision (real)	200 100 0 No No No No No No	20828 ~	100	100 0 No No No No No No	100 100 100 100 100 100 100 100 100 100	0 10 10 10 10 10 10 10		
schall Realmann (Nu) sont Throws Player (Nu) sont Throws Player (Nu) solitics Angels Company, patche Sanap Company, patche Sanap Intrivision ante Janyake et ante Janyake et a	200 100 0 No No No Tes 5 No Prof 1	100 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	100 9 No No No No No No No No No No No No No	100 0 No No 3 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	No No No No No No No No No No No	0 0 Ne Ne Ne Ne Ne Ne Ne Ne Ne Ne Ne Ne Ne		
schal Rasimum (N) bott Thrive Shape (N) hort Thrive Travel (N) retrick Angle Cargorni, tystick Song Latt/Right data Jayokk 90° dep Mode Englis habe Travels (min) wide Trystick Waterup Internet Speed © Motim mixed Speed © Motim	000 100 0 No No No No No No No No No No No No No	100 0 00 N0 N0 N0 N0 N0 N0 N0 N0 N0 N0 N0	100 + No + No	100 0 No No No 5 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2	No No No No No No No No No No No No No N	0 10 10 10 10 10 10 10 10 10 10 10 10 10		
soful Realman, (%) host Three Space (%) host Three Insurt (%) soful Real Company, patch Saup Company, and patch Saup Company, and patch Saup Company, and patch Real Company and Insure (Space 3.0) meant Space 3.	200 100 0 No No No No No No No No No No No No No	100 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	100 9 No No No No No No No No No No No No No	100 0 Ne Ne 5 5 Prof 4 10 5 25	100 80 No No No No No No No S 10 10 30	0 10 10 10 10 10 10 10 10 10 10 10 10 10		
locked Masterware, (NJ) And Threes Property (NJ) And Threes Property (NJ) motics have proved (NJ) motics and proved (NJ) motics (NJ)	200 100 0 he he he 5 ke Pel 1 20 5 20 20	100 0 80 80 80 80 80 80 80 80 80 80 80 80 80 80 80 80 80 80 8	100 9 %0 %0 %0 %0 %0 %0 %0 %0 %0 %0 %0 %0 %0 %	100 0 Nij Nij Nij Nij Nij Nij Nij Nij Nij Nij	100 100 100 100 100 100 100 100 100 100	00 96 96 96 96 96 96 96 96 96 96 96 96 96		

"Master Remote" (manöverbox) ska bytas från *"REM 421"* till *"REM 550"*.

Välj "*DX UCM Master Remote*" i drop downmenyn "*Convert from*", **H**.



STEG 6

Välj **"DX-2REM55x(AJR) in DX2 mode"** i drop down-menyn "*Convert to*", **I**.

Tryck på "*Convert*"-knappen, J.



Convert to

I.

Här visas de parametrar som behöver ses över efter konverteringen samt vad som konverterars *från* och *till*, **K**.

Tryck på "Convert"-knappen igen, L.



STEG 8

Nu visas den nya filen, konverterad till manöverbox REM 550.

De nya parametrarna visas med blå bakgrund, vilka indikerade "varning" tidigare. På tredje raden visas att det är ändrat till "*DX2-REM55x* (*AJR*) in *DX2*", M. DX2-REM55x (AJR) in DX2 m DX2-REM55x (AJR) in DX2 m

Skrolla nedåt till gröna listen där det står *"DX2-ACT4-1"*, **N**.

Under *"Profil A"* på raden *"Input Function Number"* står det en 1:a och under *"Profil B"* står en 2:a. Dessa har kommit med från REM 421 och de måste ändras, då manöverbox REM 550 använder sig av symboler och inte siffror i displayen.

			N.					
		DX2-ACT4-1						
		Actuator Profiles						
	Profile A	Profile B	Profile C					
	1	2	0					
<u>`</u>								

Contract (200 Malabority - Grane)	(9)(2)	- 4 (10)					
3 🔁 🖸	2	2					
Horsth of Hans/Jackurs Social Rumber Hindes Number	Dhegel Month D	hΦ					
4		DRU AN	valor Sertem				
PARTY NAMES OF TAXABLE PARTY.			Carlos Color	-			
Actainty Module Carrison	AC16	- Colorine	and the second second	-			
ED.		100	No. of Lot				
		-					
1	PROPERTY.	Autor	fur Prenise	Charles Inc.	Post in F	and the second se	
Incard Execution Reserves	Present A.	PROPERTY IN	PORTE C	Primat D	Promote P.	Propriet P	
Doppeding Made	Y Recoverts	Y Description D	V Brancetti	V Renowiti	Sections	Saltdard	
Output Charact 1 Select	Revenue	Not Used	Not Lised	Not Lined	Not Lower	Not Mand	
Output Chargest 2 Select	Not Land	Access	Not Lload	West Used	Not Used	Nut Used	
Output Channel 3 Select	Not Lined	Mot Gised	Not Liped	Rot Used	Not Listed	Roc Used	
Chilput Channel & Select	Not United	Mol Urawit	Not Lised	Not kined	Apple United	Heat Linesd	
Act, Profile Schulet, Centre	Norva	Norm	Noma	None	Nona	19une	
Soft Start/Stop Time (s)	0.0	0.0	0.0	0.0	0.0	0.6	
Extend Speed (%)	100	100	1.00	1100	\$06	100	
Extend Start Current (A)	17.0	6.0	0.0	6.0	8.0	6.0	
Extand Trip Carrent (A)	12.0	0.0	.0.0	16.0	\$.0	0.0	
Extend Invitit Gauss	Trip Only	Trip Only	21(b) (Drift)	Teta Grilly	Trip Only	Trike Only	
Retract Speed (%)	100	103	\$00	190	100	100	
Retract Start Current (A)	8.0	8.0	8.0	单印	8.0	8.8	
Retract Trip Current (A)	6.0	0.0	6.0	16.0	6.0	6.0	
Autract Brivest Cause	Trip Grely	Trip Only	Trip Only	Trip Unity	Trip Only	The Only	
C Married Married	In the second second	Actually 8	tailide terting	10			
Maximum Motor stats (V) ACI 1 Mode ACI 3 Mode	26.0 Fail Sole OP						
	Short/Fault	81	182	183	D4	Open	
AC13 Resistor Band Setup	50op (091v	Nepret	Unial Steed	Local-Skoe2	Nort	System SI	
ACLI Reenter Band Sefairs	- Norther	Monet	10.00	None	None	TRUCKE	

STEG 10

Här visas vilken siffra som kopplas ihop med symbol/bild. Exempelvis ser vi att *"Sits upp/ned"* är *"F5 - Seat = 5"*, O.

Function	Active	Function	Active	
F1 - Tilt		F14 - Arm rest		
F2 -Recline		F26 - Head		E5 - Segt
F3 - Left leg		F28Lié down	Š K	
F4 -Right Leg		F33 - Stand up	1	
(F5 - Sect		F34 - Sit down		
F6 - AUX1	1	F35 - AUX2		
F9 - Both legs	,	F36 - AUX3		
F11 - Footplate		F37 - AUX4	4	

550).

Då vi i detta exempel har *"Sits upp/ned"* betyder det att värdet sätts till en 5:a under *"Profil A"* på raden *"Input Function Number"*, **P**, då denna styr upp/ned. Därmed blir det rätt symbol i displayen på manöverbox REM 550.

Följaktligen sätts en 1:a under *"Profil B"*, **Q**, vilket ger rätt symbol i displayen för sitstilt.

Nu är nödvändiga ändringar i filen/programmet utförda och elrullstol REAL 6100 PLUS är redo för byte av manöverbox (här till modell REM Läs därefter in filen till stolen.

Glöm inte att spara det enligt *"Wizard Rutin"*, så att en kopia/backup finns om det skulle hända något.

Lycka till!

Image: Contract of the contract



Mercado Medic AB Tryffelslingan 14 181 57 Lidingö Telefon & FaxTel0855514300Fax0855514399

Email & InternetEmailinfo@mercado.seInternetwww.mercado.se